

# ***Golf Trolley Workshop (Devon)***

## Battery Charging Information

For full guidelines including tips for prolonging battery life, please refer to the charging instruction booklet enclosed with your trolley. It is important that you read the full charging information to ensure safe use of your battery and charger.

All batteries must be charged as soon as possible after each use. Leaving batteries discharged for long periods of time may affect the battery life.

Cyclic battery chargers are designed specifically in accordance with the battery manufacturer's requirements. A Lithium battery charger **MUST NOT** be used to charge any other battery and is designed for use with Lithium batteries only.

The charger should only be connected to an earthed socket outlet; the battery charger should only be opened and maintained by authorised personnel. Unauthorised opening will invalidate any warranty.

The battery must be stored and charged on a dry non-carpeted surface and charged at temperatures ranging between 10°C and 30°C. Charging above or below these temperatures is not recommended as it can reduce the battery capacity.

When connecting your battery to the trolley, please ensure that the connections match up depending on your battery type.

1. Disconnect and remove the battery from the trolley
2. Plug the charger into your mains supply
3. Attach the battery cable to the charger matching the red and black connections
4. Follow the charger LED indicator stages shown below:

 Powered       Charging       90% Charged       Fully Charged

5. **Once charging is complete please disconnect the charger from the mains power supply**

Do not leave your battery on charge and unsupervised for more than 24 hours and where possible, check it from time to time. If your indicator lights fail to work or your battery does not reach full charge within 24 hours then have both your charger and battery tested by your repair agent.

6. Finally disconnect the charger from the battery

**NB : Never charge the battery outside or in conditions that may allow moisture to penetrate the charger or connections. If the battery is not used for prolonged periods of time, please charge your battery at regular intervals (every 6 weeks). Please do not leave it on charge or connected to the charger.**

The battery should be charged for at least 12 hours before using it for the first time, please be aware that the charger can take up to a further 8 hours to show fully charged once the battery has reached 90% charge.

***Broadclyst Exeter tel: 01392 464775 mob: 07866304322***